



SCOREBOARD OPERATION

1. Pay attention to what the screen on the remote is telling you.
2. Turn the remote control on, push the Clear/No button until figure D appears on the screen. Wait for the board to power up.
3. Time will show a default amount, i.e. 55

To change the game time:

Press Clear/No

Press Time/At Bat

Press Time/At Bat

Enter minutes and seconds, i.e. 6000 for 60 minutes

Press Enter

4. To start the Clock, press Start/New Game
5. Press Ball+, Press Strike+, Press Out+ for desired action
6. Press Guest+1, for each Guest run. Press Guest-1 to subtract a run
7. Press Home+1, for each Home run. Press Home-1 to subtract a run
8. To reset Balls and Strikes, press Clear balls/strikes
9. To reset Outs, press out+ until 0
10. Press Inning+ for next inning
11. To correct entry not covered above:

Press Edit

Press item to be corrected, i.e. innings wrong – press innings

Enter correct amount

Press Enter

12. To reset the board for a new game:

Press Clear/No

Press Start/New Game, read what the screen asks, act accordingly

13. To turn the board off:

Press and hold Clear/NO key for five seconds until powering down appears

The scoreboard will turn off 60 seconds after the control has powered down

AFTER THE LAST GAME PLUG IN REMOTE TO RECHARGE BATTERIES